


- (ES) Guía del usuario.
- (FR) Mode d'emploi.
- (NL) Gebruikershandleiding.
- (GB) User guide.
- (DE) Gebrauchsanleitung.
- (IT) Manuale di istruzioni.
- (PT) Guia do usuário.
- (CZ) Uživatelská příručka.
- (GR) Οδηγός χρήστη.
- (PL) Instrukcja obsługi.
- (RU) Инструкция по использованию
- (CN) 用户指南。

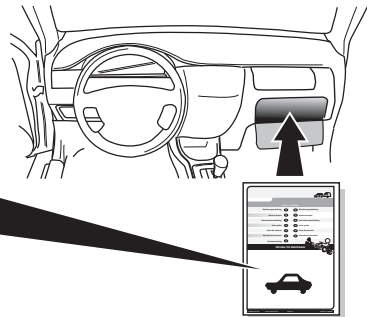

SEAT

Accesorios originales **SEAT**

SEAT Original Zubehör

SEAT Genuine Accessories

Accessori originali **SEAT**

Accessoires **SEAT** d'origine

Оригинальные аксессуары **SEAT**

SEAT γνήσια αξεσουάρ

Acessórios originais **SEAT**

SEAT origineel toebehoren

Originální p íslušenství **SEAT**

Originalne akcesoria **SEAT**

SEAT 原裝配件

Guía del usuario
Gebrauchsanleitung

User guide

Manuale di istruzioni

Mode d'emploi

Инструкция по использованию

Οδηγός χρήστη
Guia do usuário

Gebruikershandleiding

Uživatelská příručka


Instrukcja obsługi

用戶指南。


LEON 2012>



5F0055204A

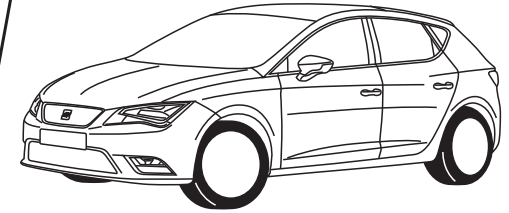

- | | | |
|-----------------------------|------------------------------|-------------------------------|
| (ES) Conexión de la base | (DE) Anschluss Steckdose | (CZ) Objímkový konektor |
| (GB) Socket connection | (PT) Conexão da tomada | (PL) Połączenie przez gniazdo |
| (FR) Connection de la prise | (GR) Υποδοχή σύνδεσης | (CN) 插座接头 |
| (IT) Allaccio zoccolo | (NL) Contactdoos aansluiting | (RU) Подключение розетки |

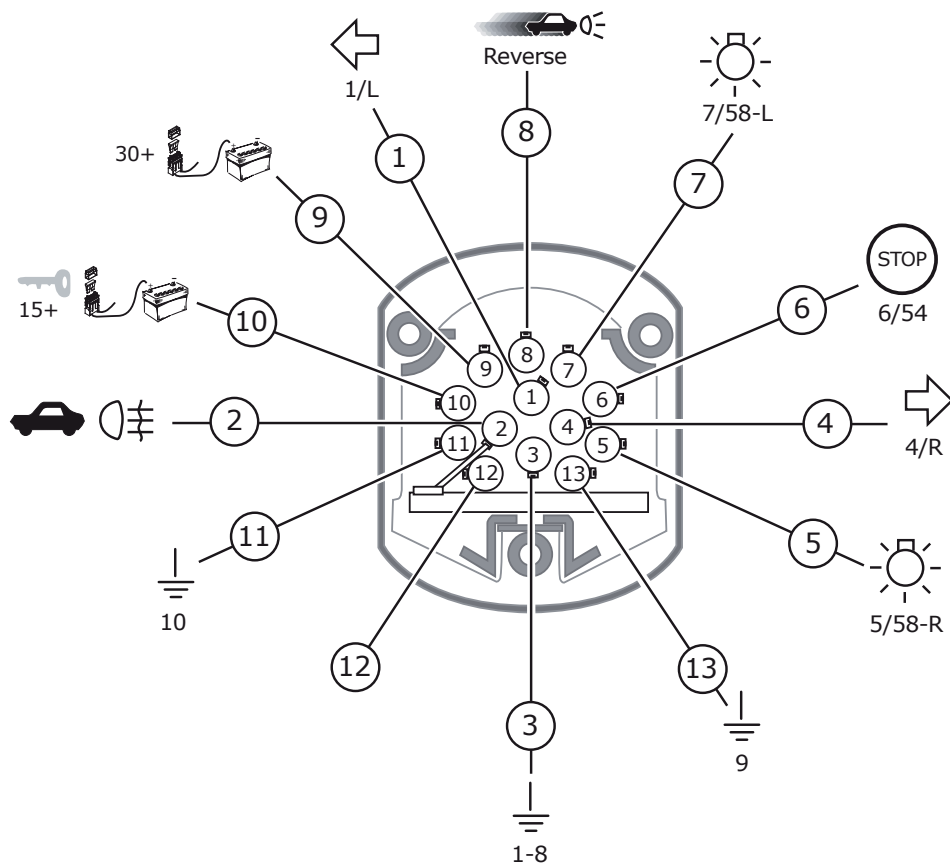

- | | | |
|-----------------------------|------------------------------|------------------------------|
| (ES) Cambio de fusible | (DE) Sicherungen austauschen | (CZ) Výměna pojistky |
| (GB) Changing the fuse | (PT) Substituir fusíveis | (PL) Wymienić bezpieczniki |
| (FR) Remplacer les fusibles | (GR) Αλλαγή ασφάλειας | (CN) 更换保险丝 |
| (IT) Sostituire i fusibili | (NL) Zekeringen vervangen | (RU) Поменять предохранители |

